



***SWIFT***

# ***SWIFT GROUP QUICK START GUIDE***

***TOURING CARAVANS***

Pre-departure checks .....	3
Arrival on site .....	4
Power up caravan .....	4
Prime the cold water system .....	5
Connect gas to caravan .....	6
Operate fridge .....	7
Operate Truma Combi boiler .....	8
Operate Truma Combi Neo .....	11
Operate Alde central heating system .....	13
Operate WHALE heating .....	16
Operate WHALE space heating .....	17

**NB.** If after following any of the steps in this guide a problem occurs, please first consult your main handbook for further information, and if problems still persist contact your supplying dealer.

The main caravan owners handbook can be found on the Swift Group website:

[www.swiftgroup.co.uk/owners/handbooks](http://www.swiftgroup.co.uk/owners/handbooks)





# PRE-DEPARTURE CHECKS

## Loading

Ensure all loose items are secured and doors, lockers and windows are closed.

Load heavy items at floor level over the caravan axle.

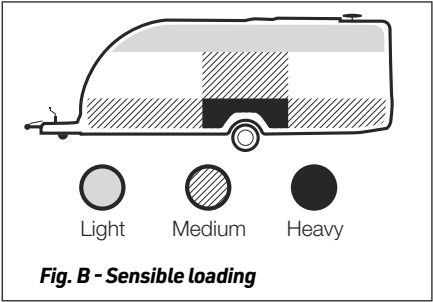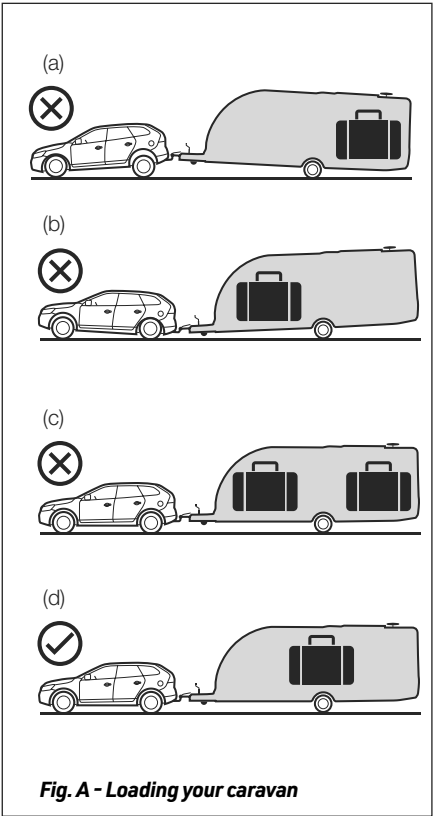

## Tyre pressures

Check all tyre pressures are correct.

## Hitching up

Couple up the caravan and ensure the green band indicating that a proper connection has been made is visible.



Ensure breakaway cable is attached looped on towbar (if there is no dedicated cable attachment point)



Align the 13 pin plug with the receiving socket on the tow vehicle.



Insert & twist road lighting connector (13 pin plug)

Check all road lighting is operating correctly.

## ARRIVAL ON SITE

### Siting, uncoupling and levelling

- Locate a suitable pitch. Check and observe site regulations
- Apply the caravan handbrake



- Lower the jockey wheel to the ground (if not already done during levelling)




- The jockey wheel can be used to help level the caravan (wheel levelling blocks may be necessary on uneven pitches)
- Disconnect the breakaway cable and road lighting plug
- Lower the corner steadies until they make firm contact with the ground




**NOTE:** Do not use corner steadies to lift or level the caravan (Unless part of an E&P levelling system - Elegance Grande)

## POWER UP CARAVAN

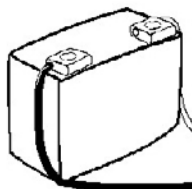


1. Install and connect leisure battery.

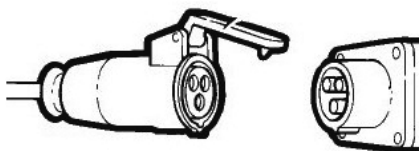

2. Plug 230V supply into caravan then into site supply (if appropriate).



3. Press black isolator button on front of power supply unit to turn system on. (Button depressed)

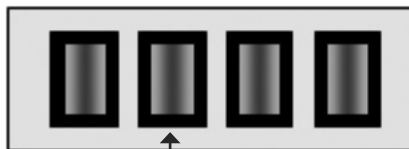


Charger

4. Press green button on power supply unit to switch on charger. (Button depressed)







5. Press power button on control panel (usually above entrance door).

## PRIME THE COLD WATER SYSTEM

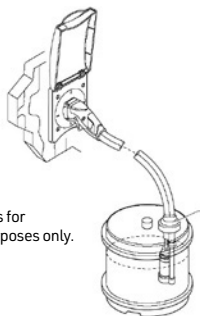

NOTE: Image is for illustration purposes only.

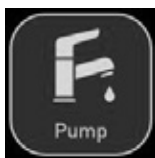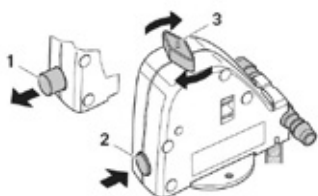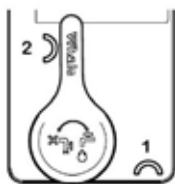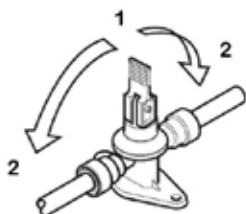

Fill external container and position supply of water close to external connection. If two water inlets are present on the side of the caravan, use the lower inlet (upper is used to fill the water tank when fitted).

Submerge supplied external hose / pump in container, ensuring the end of the hose is below the water level. Plug the external hose / pump into the side of the caravan.

Locate safety drain valve close to Alde, Whale or Truma appliance.

For Alde or Combi move Yellow handle on drain valve to horizontal position (2). For Whale, rotate handle to position (2).

Close all taps except kitchen sink tap, which should be set to 'hot' position.

For Neo push rotate handle on top of valve to position shown (3) and push button on side of valve in (position 2). If button does not stay in position 2, temperature may be too low. Turn on space heating, wait, and try again.




Close all taps except kitchen sink tap, which should be set to 'hot' position.

Press pump button on control panel, and wait until water is flowing from kitchen tap (this may take a few minutes).

Set kitchen tap to 'cold' and again wait, until water is flowing cleanly.

For vanity and shower taps / mixers, open to hot and then to cold until again water is flowing cleanly at each outlet.

## CONNECT GAS TO CARAVAN

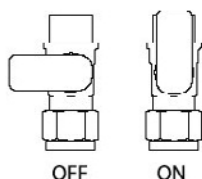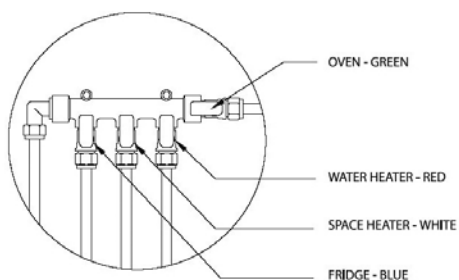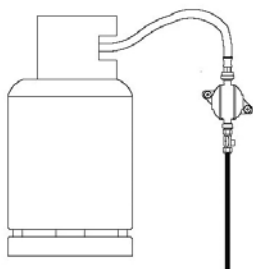

Position the gas bottle and tighten the securing straps, then fix hose to regulator, and tighten using spanner. Fix other end of hose to gas bottle, again tightening using spanner.

Turn valve on top of bottle to turn on gas supply

Locate gas isolation valves, which may be assembled onto a manifold or be in the format of a separate tap fitted close to an appliance.

If a separate hob is fitted, a Yellow handled valve will also be present to isolate the hob.

Turn each tap to the 'ON' position

Move to hob/oven. Open glass lid fully.


Press igniter on hob, turn one burner control to 'ON' position, and depress that control.

After a short while burner should light.

Gas should now be available at all appliances.

# OPERATE FRIDGE

## Dometic Fridge

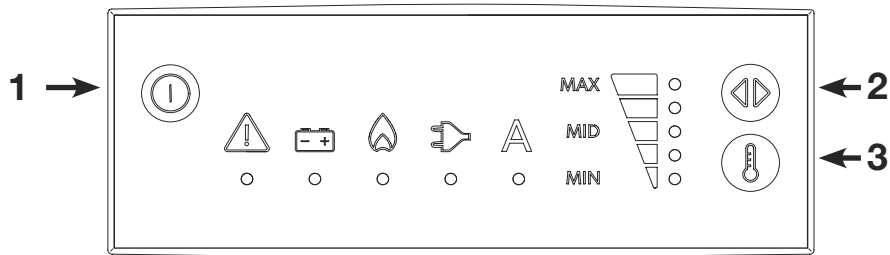


### TURN ON


Press the power button (1) for approx. one second to switch on the fridge. Pressing and holding the button (1) for approx. one second again, will switch off the fridge.


### Choose energy source

Press button (2) to move between the energy source choices. From left to right these are:

 12v (from towing vehicle)

 Gas

 230v (mains hook up)

 Automatic selection of available source

An LED will illuminate below the corresponding symbol to confirm the chosen energy source.


### Choose temperature

Press button (3) to choose a temperature. With all indicators illuminated, maximum cooling will occur.

After a short time the fridge will begin to operate. If a problem occurs (for instance no gas when gas energy source is selected), then the LED below the warning symbol will illuminate. Please note; allow the refrigerator to run for at least two hours, or ideally run the refrigerator over night, to cool to a suitable temperature for storage of food.

## OPERATE FRIDGE

### Thetford Fridge

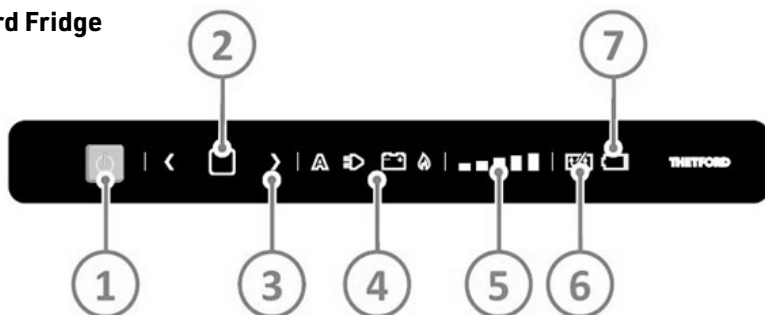

#### TURN ON

Press and hold the power button (1) for up to 1 second, other LED's on fridge control will illuminate.

#### Choose energy source

Press and hold the selection button (2) for up to 1 second.

Press the left / right arrow buttons (3) to move between energy choices. Selecting Automatic is recommended.



**Automatic**



**Mains / 230v only**



**12v operation**



**Gas operation**

#### Choose temperature

Press and hold the selection button (1) again, for up to 1 second. The LED's indicating target temperature (5) will flash

Press the left and right arrow buttons (3) to select a target temperature

Press and hold the selection button (2) for up to 1 second to confirm settings

After a short time the fridge will begin to cool, using the energy selection and target temperatures selected. If a problem occurs (For instance no gas available when gas energy source selected), then then LED's will flash to highlight the problem.

Please note; allow the refrigerator to run, ideally overnight on mains/230v or gas operation, to cool to a suitable temperature for storage of food.



## OPERATE TRUMA COMBI BOILER




The Truma Combi dual purpose boiler can be used for:

- Water heating using gas or mains electricity as an energy source.
- Space heating using gas or mains electricity as an energy source, with or without water in the system. (If space heating is used with water in the system, then the water will also be heated to an unspecified temperature).


This guide details basic settings only. For further details, and use of Swift Command (when fitted) to control heating, please see main handbook and links to external sources for further information.

Electrical isolation switch

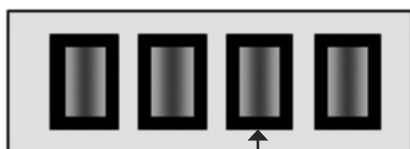

Heating/  
Hot water

The Orange 230V / Mains isolation switch on power supply unit must be ON / illuminated for electric operation of the Combi.

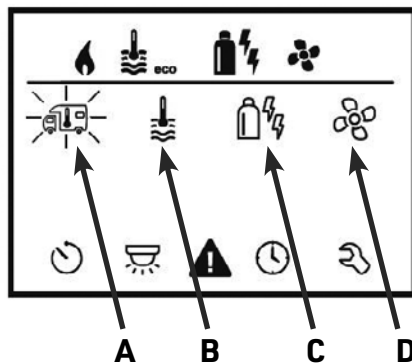

### Turn heating system ON:

Press and hold the rotary control (8) for 3 seconds to turn the system ON – the display will alternate between time and temperature displays. Press the rotary control (8) to adjust settings – the display will then show the symbols row (3).

Pressing and holding the rotary control (8) will also switch the heating system OFF.

### Choose required room temperature:

Rotate the control (8) until the vehicle symbol (A) is flashing, then press the rotary control (8) to allow adjustment of room temperature. Rotate the control (8) to select the preferred room temperature, or rotate anti-clockwise to 'OFF' if room heating is not required. Press the rotary control (8) to confirm this selection.

### Choose water heating settings:

Rotate the control (8) until the thermometer symbol (B) is flashing, then press the rotary control (8) to allow adjustment of water heating settings. Turn the rotary control (8) to select either Eco, Hot or Boost, or rotate anti-clockwise to 'OFF' if room heating is the priority, and water heating is not important. Press the rotary control to confirm the selection.

## OPERATE TRUMA COMBI BOILER



### Choose energy source:

Turn the rotary control (8) until the energy symbol (C) is flashing, then press the rotary control (8) to allow the adjustment of energy selection.

Turn the rotary control (8) to select one of the available choices, then press the rotary control (8) to confirm. Choices are:


GAS (gas only)

EL1 (0.9kw electric element)

EL2 (1.8kw electric element)

MIX 1 (Gas + 0.9kw electric element)

MIX 2 (Gas + 1.8kw electric element)

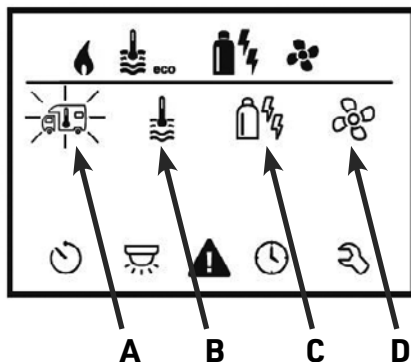

### Choose fan settings:

Turn the rotary control (8) until the fan symbol (D) is flashing, then press the rotary control (8) to allow the adjustment of fan settings. Turn the rotary control (8) to choose from one of the available options, then press the rotary control (8) to confirm. Choices are:

**OFF** - No fan operation required. Only possible when no room temperature is selected.

**Vent** - Fan operates to circulate cold air only. Only possible when appliance is cold (No water or space heating)

**Eco/High** - Fan limited to either low (Eco) or high speed. Actual fan speed will vary according to heating system requirements.

**Boost** - Maximum fan operation. Only possible when there is a large difference between room temperature and preferred room temperature.


## OPERATE TRUMA COMBI NEO



The Truma Combi Neo can provide hot water, from gas and mains (230v) electric energy sources. Follow the steps earlier in this guide to prime the water system, before attempting to heat water.


The Truma Combi Neo can also provide room heating, from gas and mains (230v) electric energy sources. Room heating is possible with or without priming the water system.

This guide provides basic settings only, for more detailed instructions see the Truma Combi Neo information in the handbook, or supplied as instructions with your tourer/motorhome.

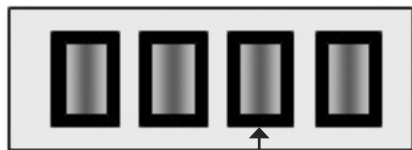

**Heating/  
Hot water**

The Orange 230v / Mains isolation switch on the Power Supply Unit must be ON / illuminated for electric operation of the Combi Neo.

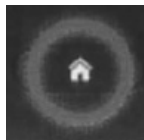


To turn heating system ON, press the HOME button. From any point the instructions below, pressing the home button again, will return you to the screen shown below.

To provide hot water:




First press the Hot Water tile on the home screen

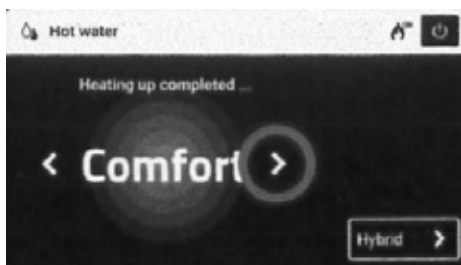

On the hot water page, pressing the arrow highlighted above will allow selection of 'Comfort' (normal hot water use) or 'Shower' (high amount of hot water use).

Next, press the tile at the bottom right of the screen (shows 'Hybrid' on image) to select an energy source.

# OPERATE TRUMA COMBI NEO

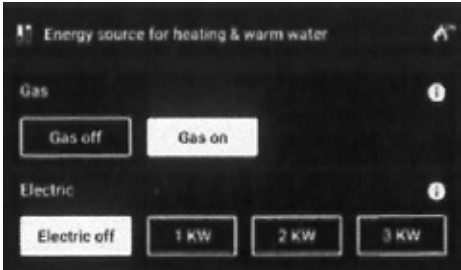


Press the upper right tile on the screen 'Gas on' to select gas operation

For heating using the 230v / mains electric supply, select 1kW, 2kW or 3kW. A higher number will reduce the time taken to heat water, but, will also consume more power. It is also possible to select combinations of Gas and Electric operation

Water heating will now start, and if required the 'home' button can be used to return to the home screen

To turn on room heating:

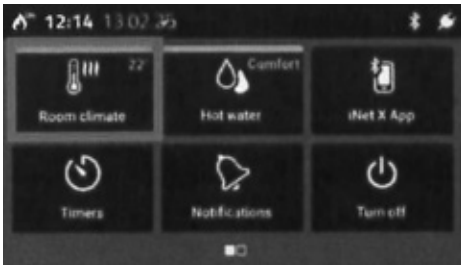


First press the 'Room climate' tile



On the 'Room climate' page, use the - and + buttons to select a target room temperature

At the top right of the screen the 'Comfort' tile is highlighted. If a quicker heat up is required, press 'Boost'

Next, press the tile at the bottom right of the screen (shows 'Hybrid' on image) to select an energy source.

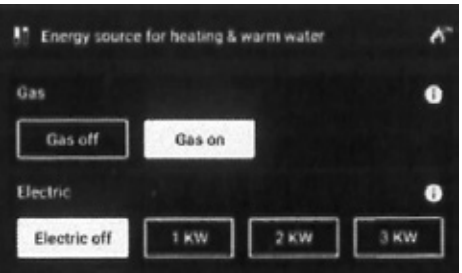


Press the upper right tile on the screen 'Gas on' to select gas operation

For room heating using the 230v / mains electric supply, select 1kW, 2kW or 3kW, a higher number will reduce the time taken to achieve target temperature, but, will also consume more power. It is also possible to select combinations of Gas and Electric operation

Room heating will now start

**NOTE:** Only one set of energy selections can be made on the Combi Neo, at any one time. That set of energy settings will be applied to both the water heating, and the room heating.

## OPERATE ALDE CENTRAL HEATING SYSTEM

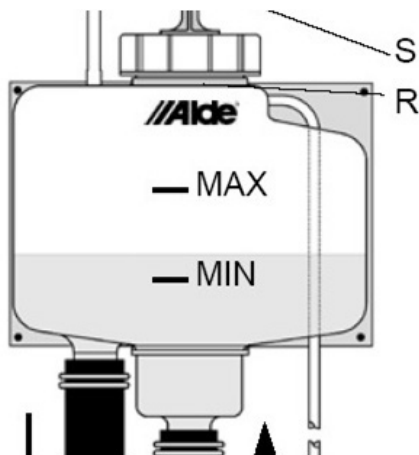


The Alde 3030HE central heating system can provide hot water and room heating, from gas and/or mains (230v) electric energy sources. The room heating can be used with or without water in the heater - if water is present, then the water will also be heated to an unspecified temperature.

Before using the central heating system check that the level of 'glycol' fluid which is used to heat the radiators, is between the min and max levels on the header tank.

The Alde control panel is located near the entrance door, and is used to select energy source and water / room heating operations. This guide details basic settings only. For further details, and use of the Swift Command system (when fitted) to control heating, please see main handbook and links to external sources for further information.

Electrical isolation switch

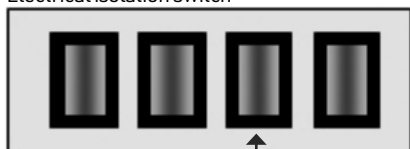

Heating/  
Hot water

The Orange 230V / Mains isolation switch on power supply unit must be ON / illuminated for electric operation of the Alde central heating system.

## OPERATE ALDE CENTRAL HEATING SYSTEM



Control panel start up screen



Control panel main menu screen

### Turn heating system ON and OFF:

To turn the panel on, press the power button (round button on left). The heating system will return to previously used settings, until adjustments are made. Press the menu button (round button on right) to display the main menu showing heating system options. Please note after a short time the display will switch back from the menu settings to the standby screen, if no further areas of the screen are touched.

Pressing and holding the power button will switch the heating OFF.



### Choose required room temperature


Using the touch screen display, press the 'Living room' section of the screen.

Press the 'Green on/off button' section of the touch screen to turn water heating from OFF to Normal.

Press the slider in the 'Boost 30 minutes' section if a higher hot water temperature is required.

Once settings are chosen, press the 'back arrow' section in the top left corner of the touch screen to return to the main menu.

## OPERATE ALDE CENTRAL HEATING SYSTEM

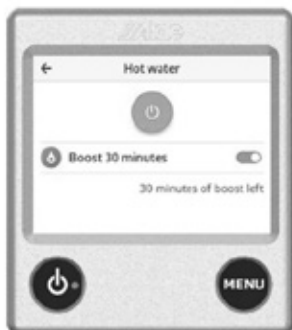

### Choose water heating settings

On the touch screen display, from the main menu page, press the 'Hot Water' section of the screen.

Press the 'Green on/off button' section of the touch screen to turn water heating from OFF to Normal.

Press the slider in the 'Boost 30 minutes' section if a higher hot water temperature is required.

Once settings are chosen, press the 'back arrow' section in the top left corner of the touch screen to return to the main menu.



### Choose energy settings

#### Choose energy settings - Electric operation

For electrical room or water heating (mains hook up required) slide the bar in the 'Max electricity' section of the touch screen from 0kW (electric heating OFF) to 1kW, 2kW or 3kW.

#### Choose energy settings - Gas operation

For gas room or water heating move the slider in the 'Gas' section of the touch screen from left (OFF) to right (ON).

Once settings are chosen, press the 'back arrow' section in the top left corner of the touch screen to return to the main menu.

#### Choose alternate room temperature control (Elegance models only)

This feature allows the Alde heating system to measure actual room temperature from one of two locations, to suit how the tourer is being used.

Locate the switch and 2nd thermostat position at the rear of the tourer.




Typical 2nd thermostat and switch arrangement

With the switch OFF, room temperature will be measured by the Alde controller above the entrance door.

With the switch ON, room temperature will be measured by the second thermostat position, at the rear of the tourer.

# OPERATE WHALE HEATING

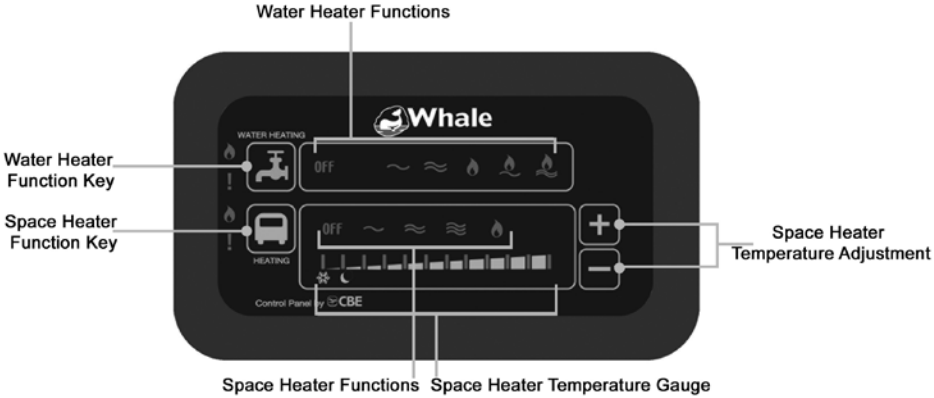


The Whale Duo control panel allows operation of the Whale space heater and Whale water heater from a single control panel.

It is possible to use space heating and water heating separately, so space heating can be used without priming the water system. It is possible to select gas or electric (230V) operation for either appliance.

Dual fuel operation of the water heater is also possible, see main handbook for details.

The water heater should not be switched on if the water system is not primed.

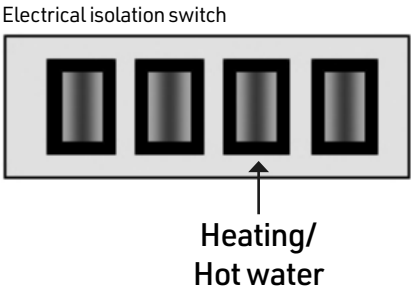

The Orange 230V / Mains isolation switch on power supply unit must be ON / illuminated for electric operation of the Whale space heater.



# WHALE HEATING SYSTEM - SPACE HEATER



On the Duo control panel, press the Space Heater ON button and the Power Settings indicators will illuminate one at a time to show which power level has been selected.



For 500w electric element



For 1000w electric element



For 2000w electric element



For gas operation



## Choose required room temperature:

When a Power Setting has been selected, select a target room temperature using the Temperature Up/Down buttons. Press the Temperature Down button to move the Space Heater Temperature LED indicator to the left, and set a lower target temperature, and press the Temperature Up button to move the LED indicator to the right, and set a higher target temperature.



Ensure the water system is primed, as described earlier in this guide.

Turn Water Heater ON and choose energy source:



On the Duo control panel, press the Space Heater ON button and the Power Settings indicators will illuminate one at a time to show which power level has been selected.



For 750w electric element



For 1500w electric element



For gas operation



For combined 750w and gas operation



For combined 1500w and gas operation



***SWIFT***

## **SWIFT GROUP**

Dunswell Road  
Cottingham  
East Yorkshire  
HU16 4JX

**Tel:** 01482 875740

**Fax:** 01482 840082

### **Customer Experience Team**

[enquiries@swiftleisure.co.uk](mailto:enquiries@swiftleisure.co.uk)

FIND OUT MORE AT **SWIFTGROUP.CO.UK**